



# 50263

## Natural Home III











①

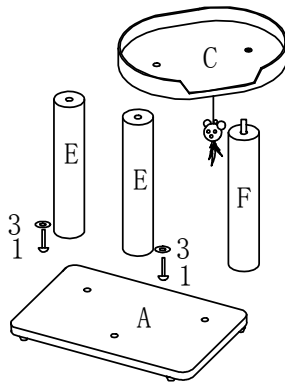


②

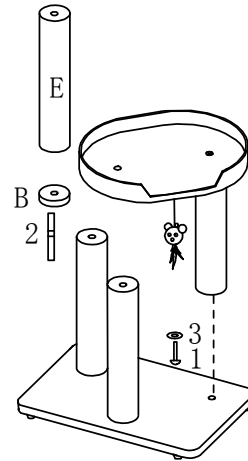


③

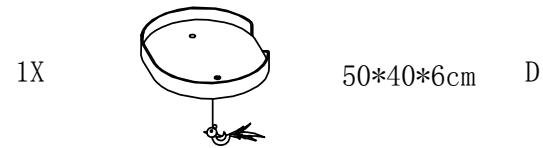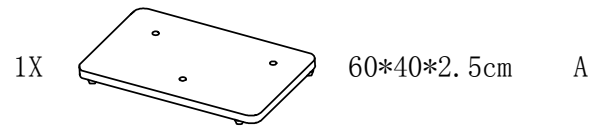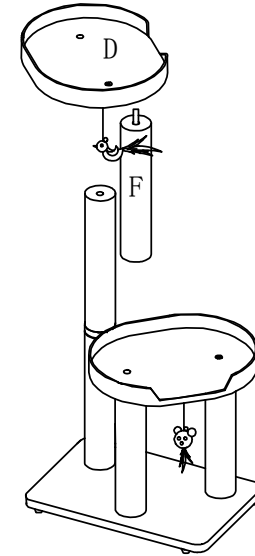


④

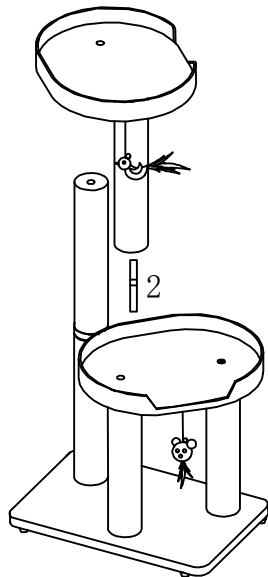



⑤

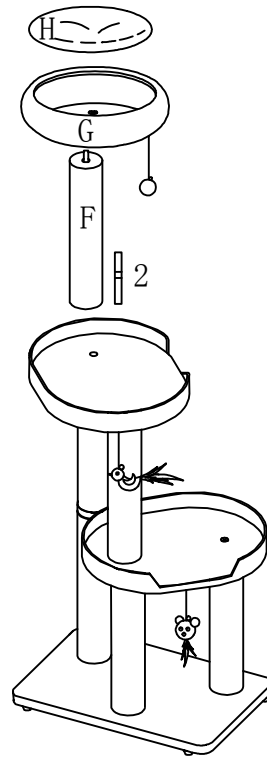

⑥

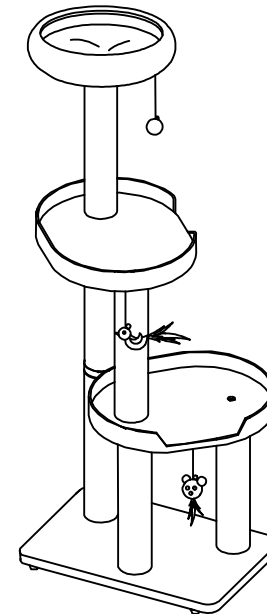

1X  D9\*45cm

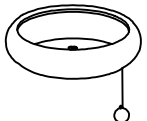
1X  D40\*12cm


1X  D40cm

F

G

H

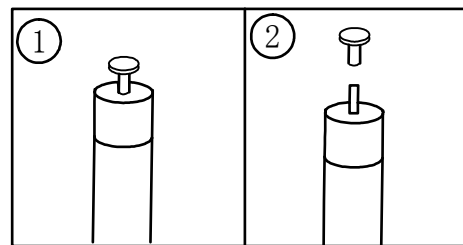

2X  D10\*90mm (2)

Remove the black cap on screw of post before build up the tree